

Geckota

WATCH MANUAL

WELCOME

Thank you for choosing your high quality *Geckota* watch and welcome to the *Geckota* family! Like you, we love receiving watches, so we know you'll want to start enjoying yours immediately.

Please read this owner's handbook before setting and wearing your *Geckota* watch for the first time. This is important because it will help ensure that you get years of enjoyable timekeeping from your *Geckota* watch.

A handwritten signature in black ink, appearing to read "Jon Quinn", is centered on a light gray rectangular background.

Jon Quinn

Founder & Managing Director



Geckota C-01 Gen 2 Racing Chronograph Watch Black

CONTENTS

About Us

The Geckota Story 7

Operating Your Watch

Screw-down Crown 10

Setting the Time 14

Winding Your Watch 16

Setting the Date 18

Chronograph Operation 20

Reset Function 22

515.24H GMT Function 24

Adjusting Your Strap

Link Removal 30

Nato Strap Adjustment 32

Mesh Strap Adjustment 33

Movements

ETA 2824-2/Sellita SW200 36

Miyota 9015 38

Miyota 8218 40

PTS 3300 42

SII NH35 44

SII VK64 46

Seagull TY2709 48

Seagull ST19 50

Miyota 9039 52

Miyota 6S21 54

HKPT PT5000 56

Ronda Caliber 515.24H 58

Contact Us 61

Guarantee 64

ABOUT US



Geckota G-01 Vintage Style Automatic Watch Brushed Red Dial

About Us

The Geckota Story

Geckota simply grew from a hobby. Back in 2010, our director Jon Quinn collected, studied and enjoyed watches in his spare time. He was an avid watch geek, which led to an idea: to sell watches and watch straps online to like-minded enthusiasts without a high price tag.

We made contact with suppliers and started developing our own range of watches and watch straps. Doing this meant we had full control over the design, materials, specifications, movements and most importantly, a carefully considered price point.


Our philosophy and work ethic hasn't changed since day one. We all share Jon's original vision for the company and strive to bring quality products to our customers.

OPERATING YOUR WATCH

There are three positions for the crown:


- [1] Winding/neutral position
- [2] Date setting position
- [3] Time setting position

When you screw the crown down, the watch case locks with the crown's internal threads and gaskets to form a secure seal. The seal is vital for your watch to resist entry of water and dust. After adjusting your watch, always make sure the crown is fully screwed down before getting the watch wet.

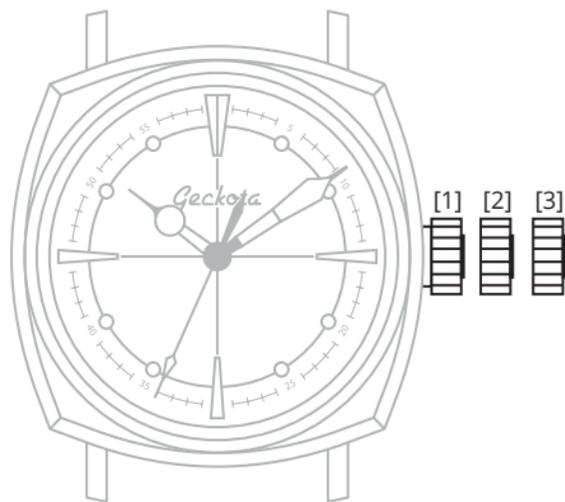


TO UNSCREW THE CROWN:

Turn it gently ANTI-CLOCKWISE. Because it is spring-loaded and under tension, the crown will 'jump out' slightly into its normal position when fully disengaged.

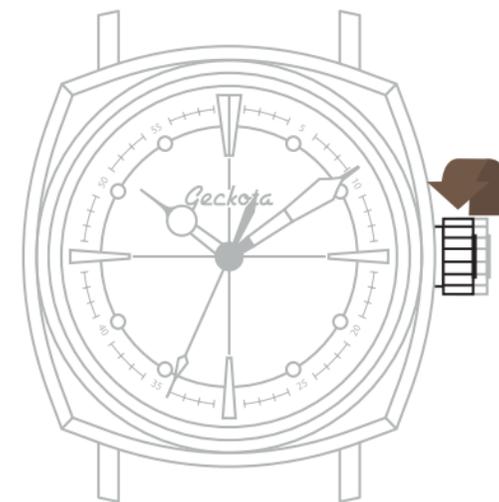

TO SCREW THE CROWN DOWN:

Push the crown gently towards the case.
While holding it down turn it gently
ANTI-CLOCKWISE about half a turn.

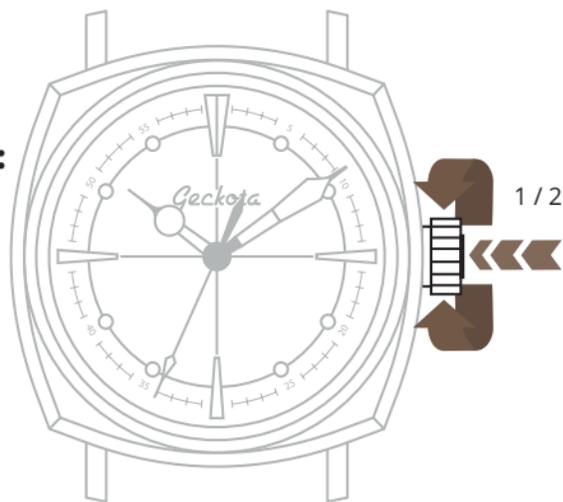

Then, still holding it down, turn the crown
CLOCKWISE to engage the thread and
continue turning it until it is secure.


 **CAUTION**

Cross-threading or over-tightening
the screw-down crown may damage
your watch.


1. First, unscrew the crown.
2. Pull the crown out to position three.




3. Turn the crown to advance the hour and minute hand.
4. Push the crown back to the normal position.
5. Screw down the crown.

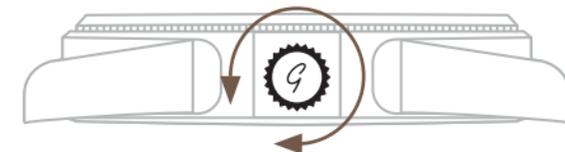


1. First, unscrew the crown until it 'jumps out' slightly into its normal position.

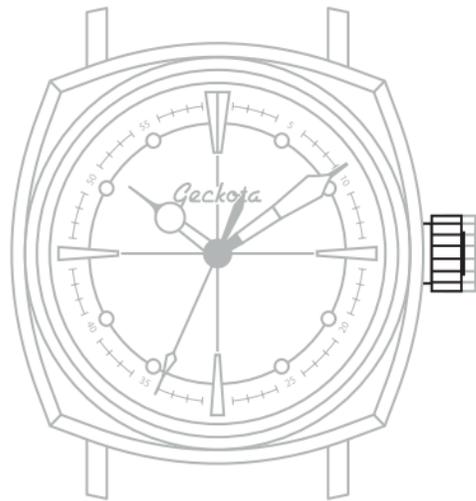


2. Wind the watch by turning the crown CLOCKWISE 20-55 times.
3. Push the crown back to the normal position.
4. Screw down the crown.

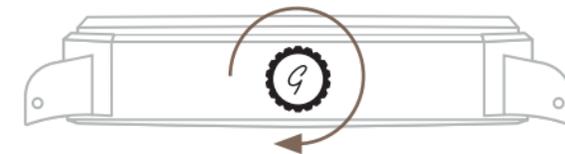

1. First, unscrew the crown.
2. Pull the crown out to the first-click position.

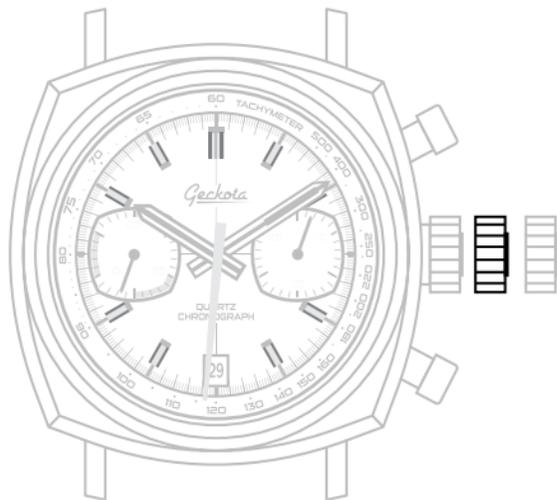

3. Turn the crown to adjust the date.
4. Push the crown back to the normal position.
5. Screw down the crown.

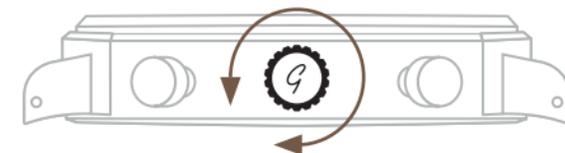


1. To start or stop the chronograph, press the Start/Stop pusher.
2. When the chronograph is stopped, it can be restarted from the same position by pressing the Start/Stop pusher again.




3. To reset the chronograph, press the reset pusher. The chronograph hand will jump back to the 12 position ('instant reset' function).

NOTE: Pressing the reset pusher during chronograph operation will not cause any problems.

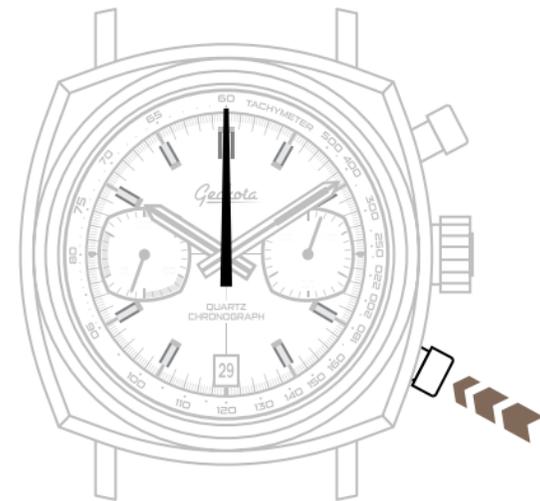


If the chronograph hand positions are incorrect after normal resetting, you can reset them as follows.

1. Pull the screw crown out to position three.

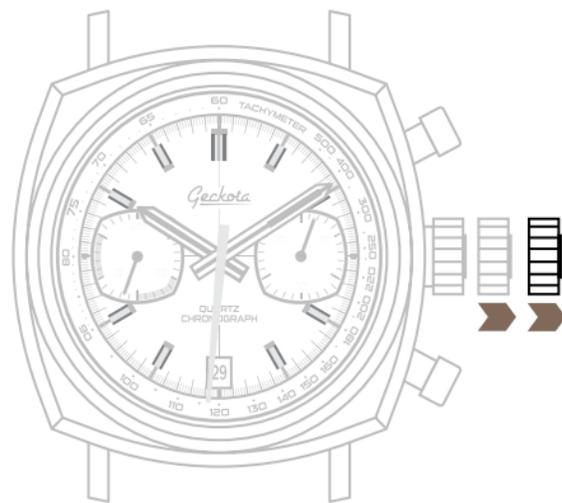

2. Press the reset pusher and hold it down for two seconds. This will return the hands to their correct positions. Then screw down the crown.

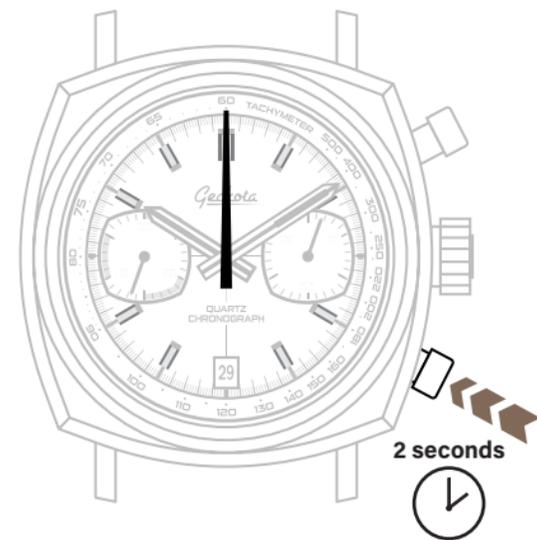

1. Position of rest (watch running).



2. Quick-change correction for **date** (model dependant)
 - Pull the crown out to position two (watch still running).
 - Turn the crown **CLOCKWISE** until the desired date appears.
 - Push the crown back into position one.



2. Quick-change correction for
24-hour display

- Pull the crown out to position two (watch still running).
- Turn the crown ANTI-CLOCKWISE until the desired time appears.
- Push the crown back into position one.



3. Setting the time


- Pull the crown out to position three (watch stopped).
- Turn the crown until the current time is displayed (remember the 24-hour cycle).
- Push the crown back into position one.




ADJUSTING YOUR STRAP

Link Removal

1. Push pins out using an appropriate tool (we recommend a pin pusher) in the direction of the arrows shown on the strap.

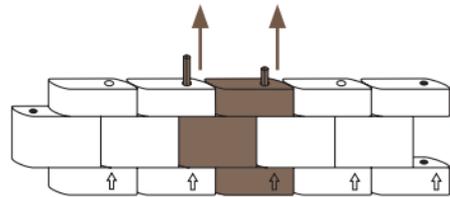



2. Remove link.

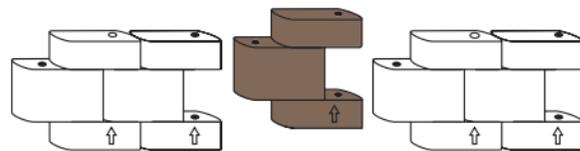

Link Removal


3. Make sure you insert the pin - round end first - in the opposite direction of the guide arrows.

NOTE: Straps that have no arrows on the underside may be connected by screws, in this case you will need an appropriately sized jeweller's screwdriver to adjust.

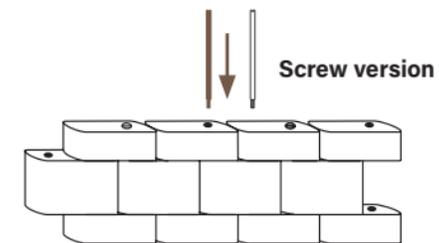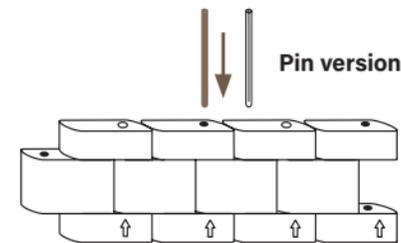


Adjusting Your Strap

Nato Strap

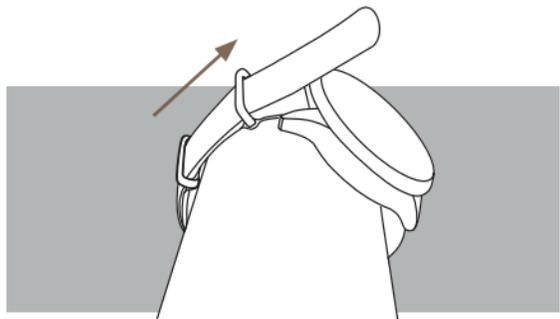




1. Pull the strap through the keepers after you've adjusted it to your wrist.

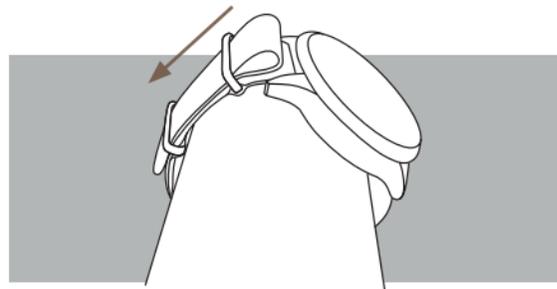

2. If the strap's too long, fold it back into the keepers.

Adjusting Your Strap

Mesh Strap Adjustment

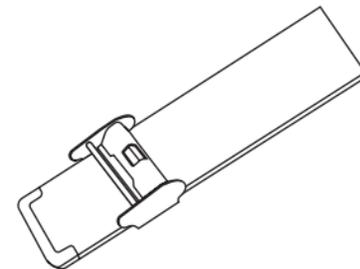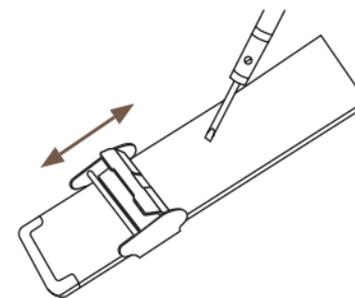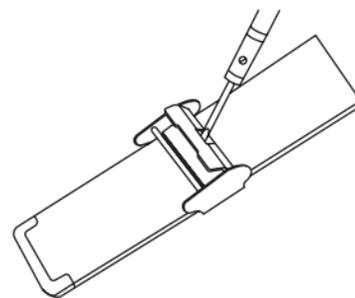

To loosen the clamping mechanism, use a small flat-headed screwdriver or equivalent tool. You can then slide the clasp up and down to find the perfect fit for your wrist.

NOTE: Try using a flat head jeweller's screwdriver (shown in the illustration) or our Professional Spring Bar Tool.

MOVEMENTS

A selection of movements used within the *Geckota* range



Movements
ETA 2824-2 / Sellita SW200

Technical Specifications

Movement Type	Automatic
Jewels	25/26
Vibrations Per Hour	28,800 vph
Power Reserve	Around 38 hours
Accuracy	+/- 30 seconds per day
Hacking*	Yes
Winding Direction	Bi-directional

*The seconds hand will stop on a movement with a "Hacking" feature when the crown is in the time setting position.

Technical Specifications

Movement Type	Automatic
Jewels	24
Vibrations Per Hour	28,800 vph
Power Reserve	Around 42 hours
Accuracy	-10/+30 seconds per day
Hacking	Yes
Winding Direction	Uni-directional






Movements
Miyota 8218


Technical Specifications

Movement Type	Automatic
Jewels	21
Vibrations Per Hour	21,600 vph
Power Reserve	Around 42 hours
Accuracy	-20/+40 seconds per day
Hacking	No
Winding Direction	Uni-directional

Technical Specifications

Movement Type	Manual Wind Tourbillon
Jewels	18
Vibrations Per Hour	28,800 vph
Power Reserve	Around 40 hours
Accuracy	+/-25 seconds per day
Hacking	No

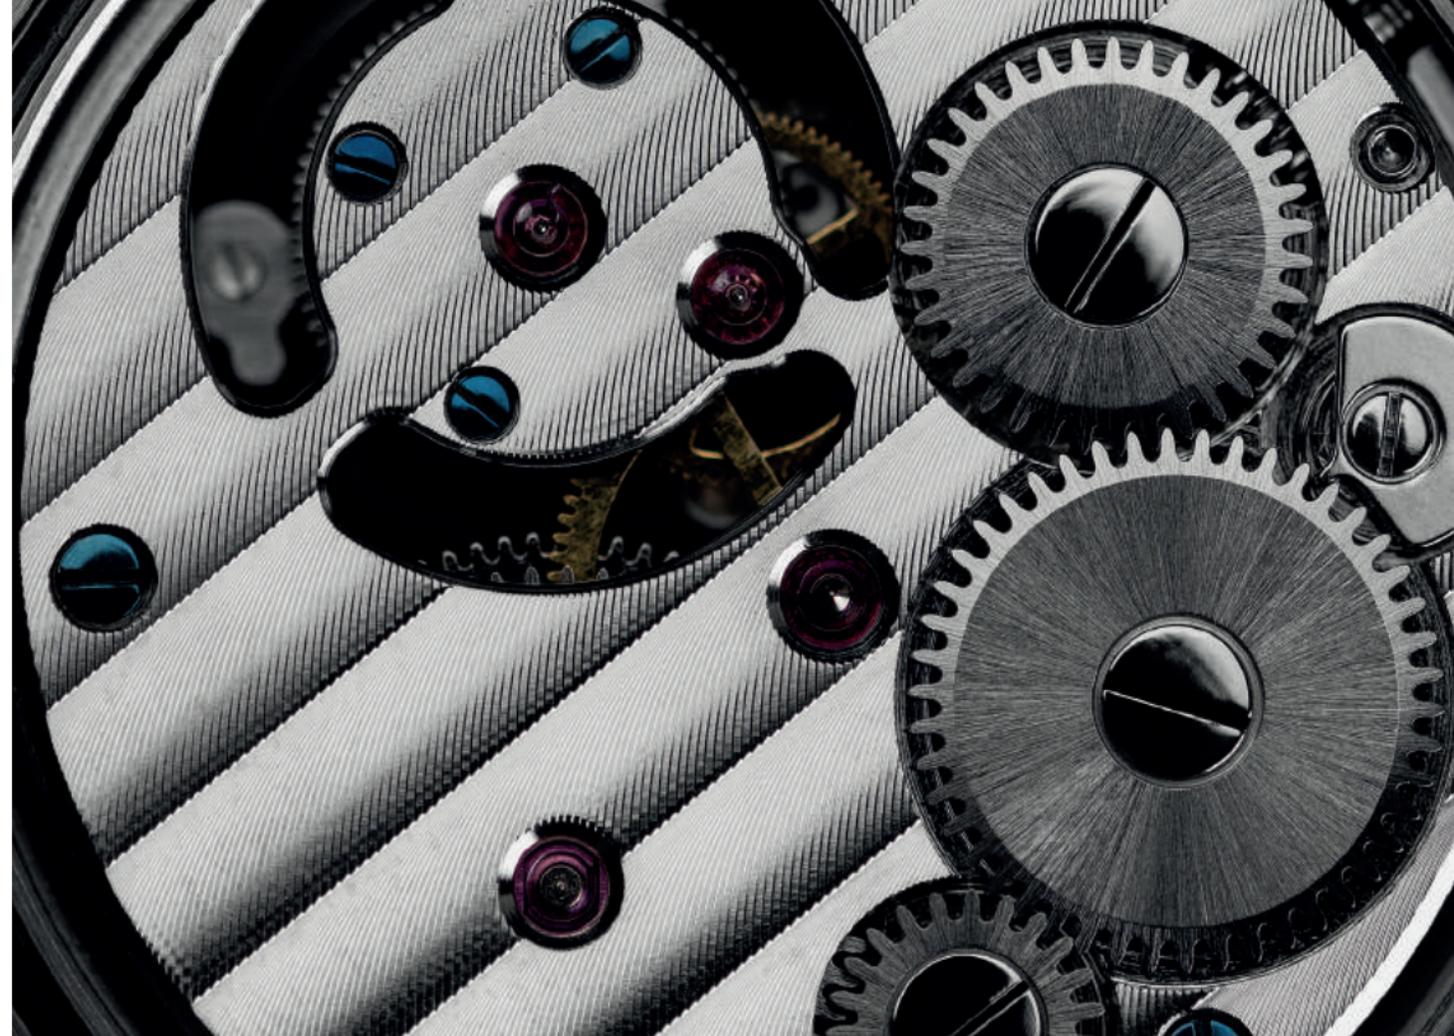

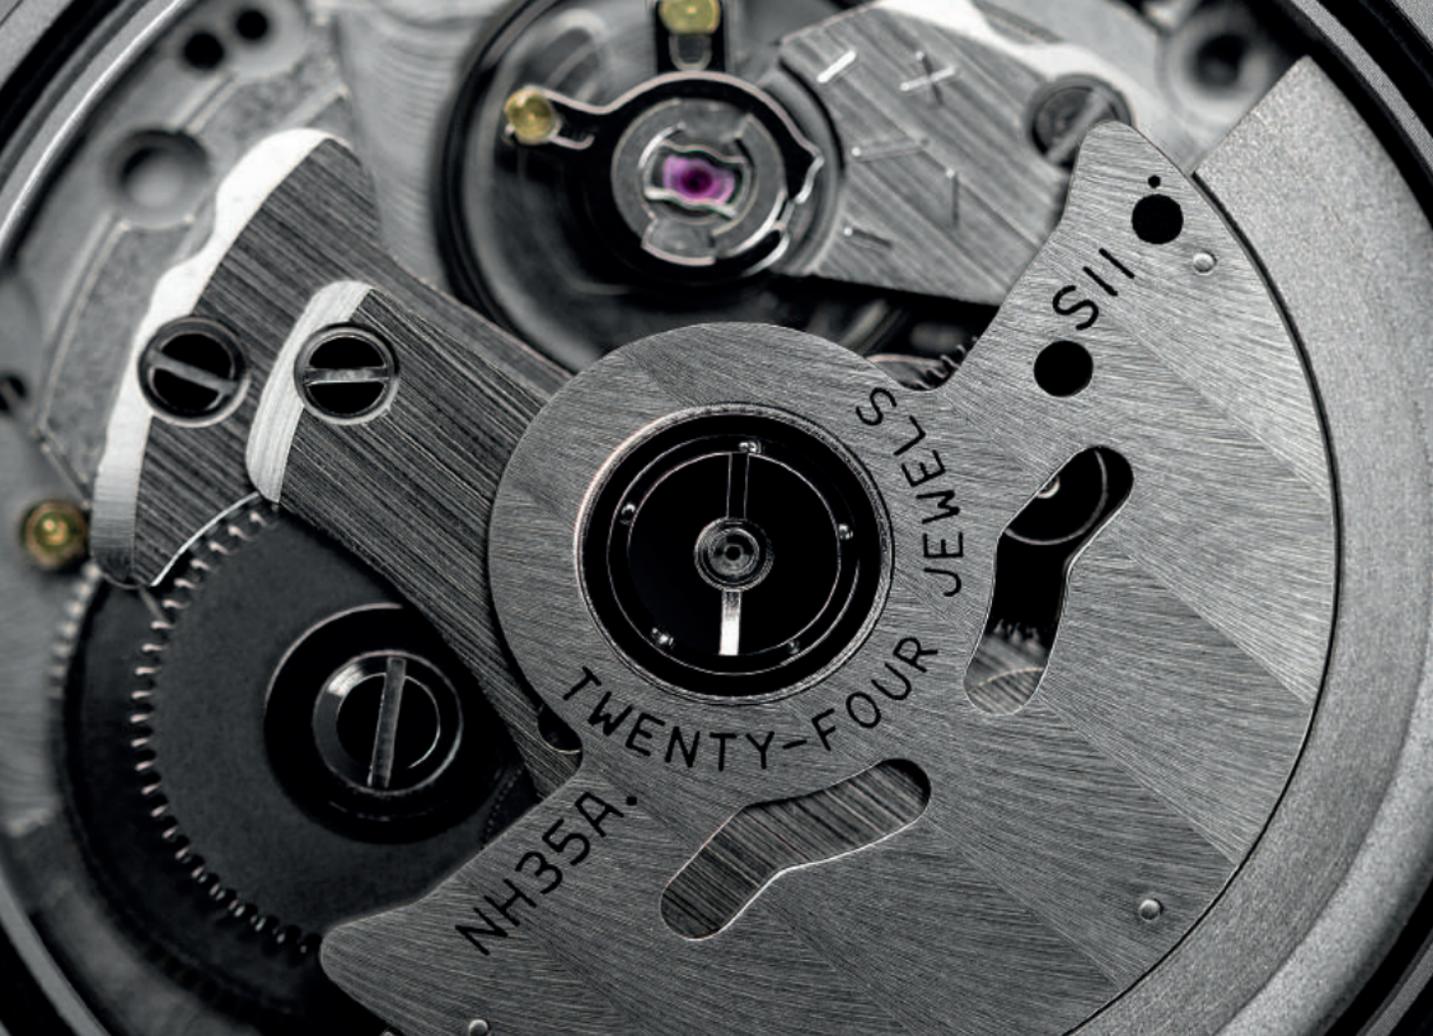

Movements
SII NH35

Technical Specifications

Movement Type	Automatic
Jewels	24
Vibrations Per Hour	21,600 vph
Power Reserve	Around 41 hours
Accuracy	-20/+40 seconds per day
Hacking	Yes
Winding Direction	Bi-directional

Technical Specifications

This hybrid meca-quartz Calibre 64 movement combines quartz and mechanical technologies, making this movement highly accurate thanks to quartz timekeeping, but with the look and feel of an expensive mechanical chronograph movement.

Movement Type	Meca-Quartz
Jewels	0
Accuracy	+/-20 seconds per month
Battery Life	3 Years





Movements
Seagull TY2709

Technical Specifications

Movement Type	Automatic
Jewels	20
Power Reserve	Around 42 hours
Accuracy	-5/+25 seconds per day

Technical Specifications

Movement Type	Hand Wound
Jewels	19
Vibrations Per Hour	21,600 vph
Power Reserve	Around 38 hours
Accuracy	-3/+17 seconds per day





Movements
Miyota 9039


Technical Specifications

Movement Type	Automatic
Jewels	24
Vibrations Per Hour	28,800 vph
Power Reserve	Around 42 hours
Accuracy	-10/+30 seconds per day
Hacking	Yes

Technical Specifications

Movement Type	Quartz
Jewels	0
Accuracy	+/-20 seconds per month
Battery Life	3 Years



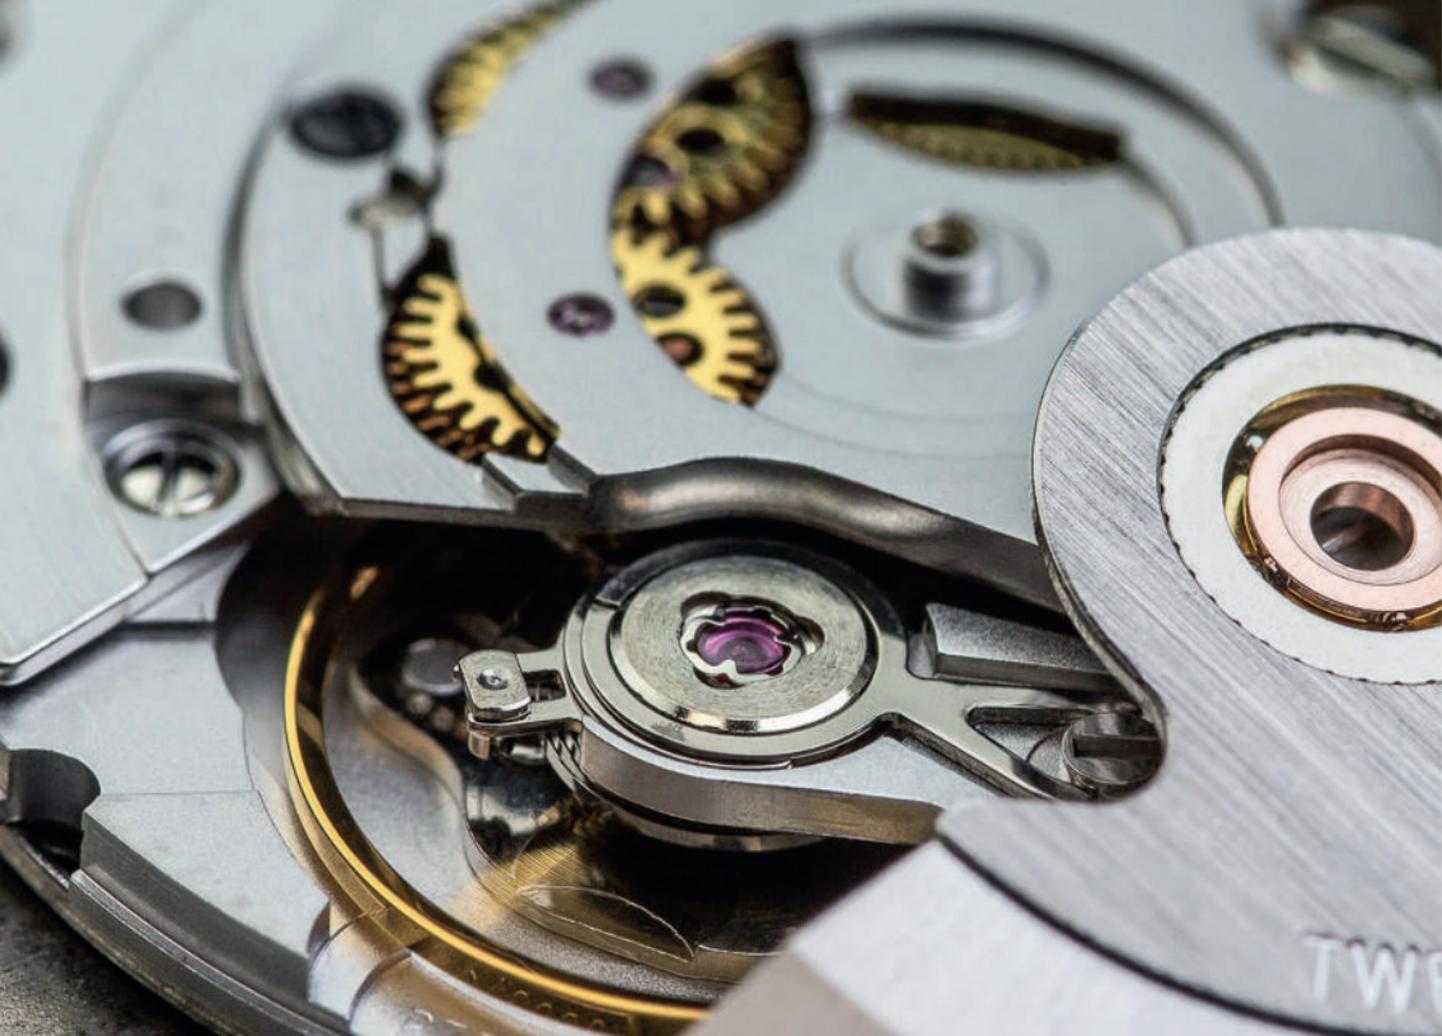


Movements
HKPT PT5000

Technical Specifications

Movement Type	Automatic
Jewels	25
Vibrations Per Hour	28,800 vph
Power Reserve	Around 38 hours
Accuracy	+/-12 seconds per day
Hacking	Yes

Technical Specifications

Movement Type	Quartz
Jewels	1
Accuracy	-10/+20 seconds per month
Battery Life	~45 Months

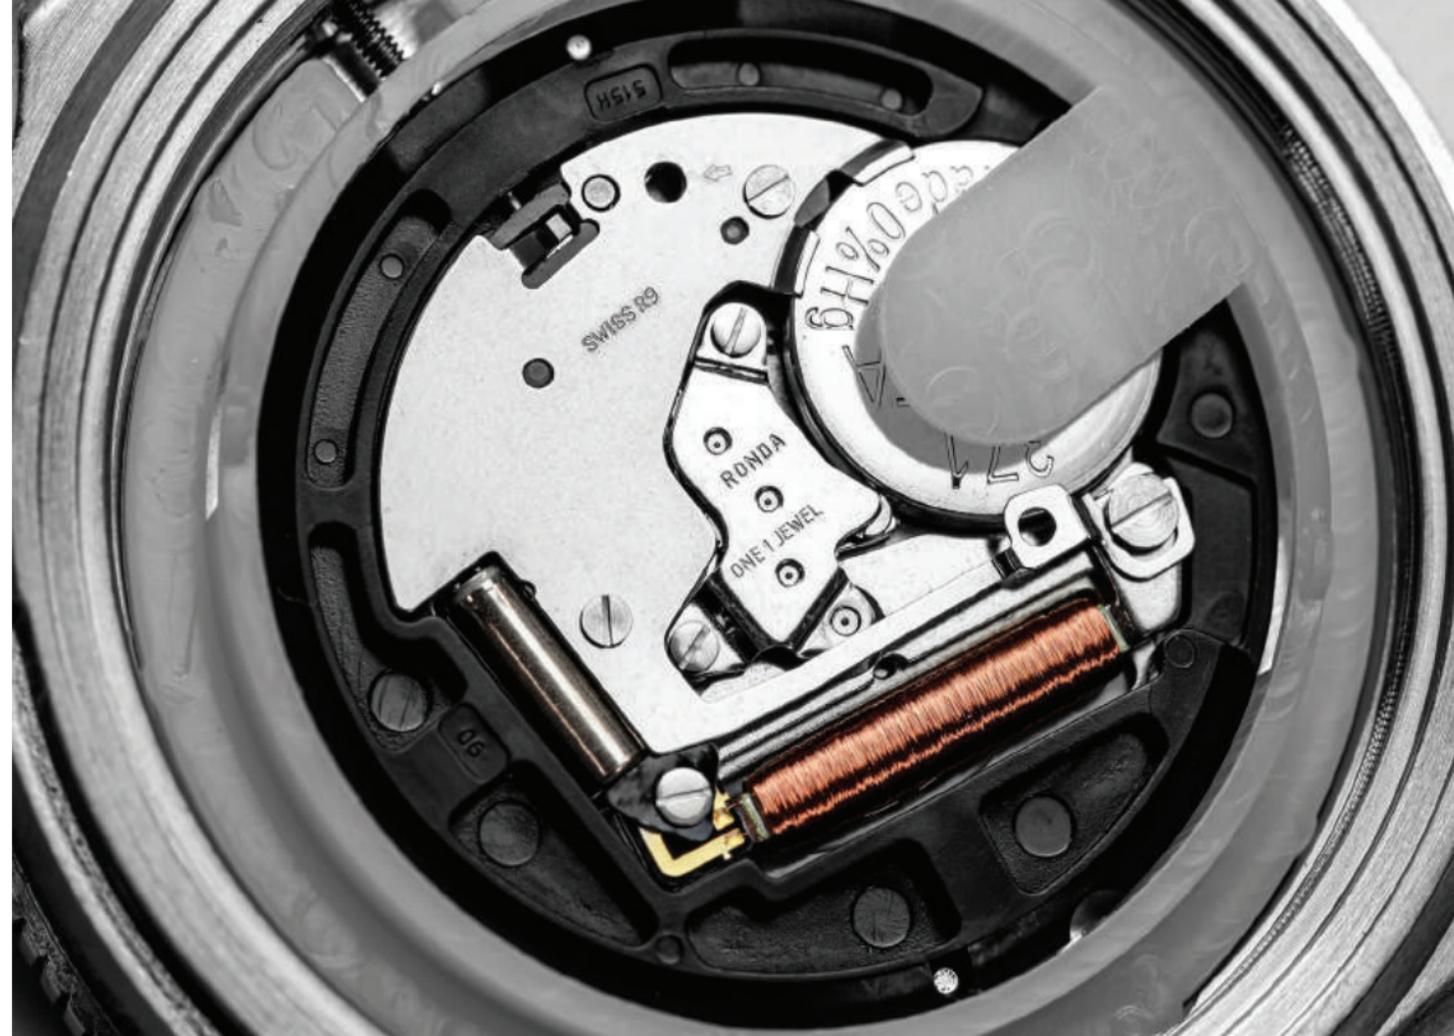

CONTACT US



Geckota G-02 Gen 2 Automatic Diver's Watch Black

Contact Us

Keep In Touch

If you have any more questions, please contact our customer service team. Remember to visit www.geckota.com to tell us about your experience of buying, owning and wearing your *Geckota* watch.

Post

Geckota Limited
PO Box 185
Tewkesbury
Gloucestershire
GL20 9BL
UNITED KINGDOM

Email

support@geckota.com

Phone

+44 (0) 1684 252 686

Certificate of Guarantee

We want you to have full confidence in your new *Geckota* watch. That's why we guarantee your watch for **24 months** from the original purchase date.

This guarantee is void if the watch case has been opened, or the product is damaged by accident, negligence or other factors not due to defects in material or workmanship.

Watch Model

Purchase Date

GECKOTA
ENGLAND